

# USER MANUAL

## FOGGER 3000DMX

### CAUTION!

**Keep this device away from rain and moisture!**

**Unplug mains lead before opening the housing!**

**Make sure of the voltage on your end suitable for the unit!**

For your own safety, please read this user manual carefully before you initially start-up.

Every person involved with the installation, operation and maintenance of this device has to

- be qualified

- follow the instructions of this manual

### 1. INTRODUCTION

Thank you for having chosen club smoke DMX series. You will see you acquired a powerful and versatile device. Unpack your item. Before you initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

### 2. SAFETY INSTRUCTIONS

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature. Always plug in the power plug least.

Make sure that the power-switch is set to OFF position before you connect the device to the mains. Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution! Make sure that the available voltage is not

higher than stated on the rear panel. Make sure that the power-cord is never crimped or damaged by sharp edges. Check the device and the power-cord from time to time. CAUTION! Before filling the machine disconnect from mains. Never drink fluid or use it on the inside or outside of a human

body. If fluid gets in contact with skin or eyes, rinse thoroughly with water. If it is necessary call a doctor immediately! DANGER OF EXPLOSION! Never add flammable liquids of any kind to the

fog liquid. Keep device upright. Never aim the output nozzle directly at people or at open flames.

DANGER OF BURNING! Keep minimum distance of 50 cm to nozzle! Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power-cord by the plug.

Never pull out the plug by tugging the power-cord. Keep away children and amateurs!

Never leave this device running unattended.

Never leave this device running unattended.

### 3. FEATURES


Ideal for party-rooms or small discotheques, Powerful output, With remote control, Quality

thermostat, Overheat protective switch, Constant and steady output fog; DMX 512 protocol

controlling the fog output

**\*\*\*MIRROR PIPING MAKING PIPES NON BLOCKED**

**\*\*\*ELECTRONIC TEMPERATURE CONTROL ADJUSTING THE TEMPERATURE AT A STEADY LEVEL AND UNNECESSARY TO HEAT AGAIN AND AGAIN**

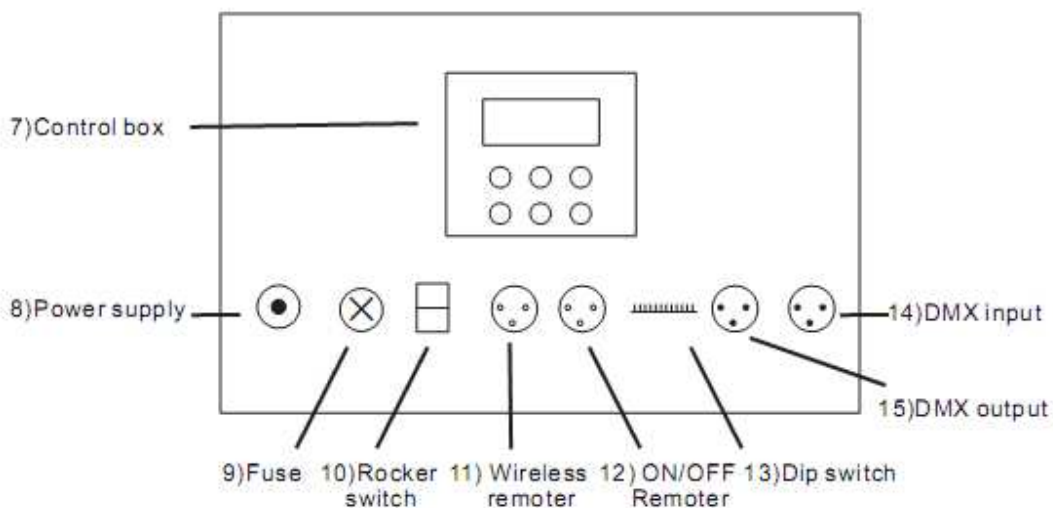

When the fogger finishes warming up, ready to emit, the blue led at the back of the item lights up.

## 4. STARTING OPERATION

### 1) DMX protocol

Install the device on a plane surface. The fluid tank of the device needs to be filled with standard fogger fluid before starting up operation and always disconnected from the mains as fluid could be spilled. We recommend high-quality Glow fogger fluids. You must not use substances that are classified as "dangerous working material" or "inflammable fluids". If fluid should get into the interior of the device, disconnect from mains immediately and consult a technician.

Switch the device on via the power switch.

### DMX-512 connection / connection between fixtures

**The wires must not come into contact with each other, otherwise**

#### Occupation of the XLR-connection:

If you are using controllers with this occupation, you can connect the DMX-output of the controller

directly with the DMX-input of the first fixture in the DMX-chain. If you wish to connect DMX-controllers with other XLR-outputs, you need to use adapter-cables.

#### **Building a serial DMX-chain:**

Connect the DMX-output of the first fixture in the DMX-chain with the DMX-input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected.

**Caution:** At the last fixture, the DMX-cable has to be terminated with a terminator. Solder a 120 resistor between Signal (-) and Signal (+) into a 3-pin XLR-plug and plug it in the DMX-output of the last fixture.

#### **Connection with the mains**

Connect the device to the mains with the enclosed power supply cable.

#### **Addressing**

After you connect the fogger to the mains, the dip switch on the rear allows you to assign the DMX fixture address, which is defined as the first channel from which the item will respond to the controller. If you set, for example, the address to channel 7, the item will use the channel 7 for control. Please, be sure that you don't have any overlapping channels in order to control each item correctly and independently from any other fixture on the DMX data link. If two, three or more item are addressed similarly, they will work similarly. Press the dip 1 to ON position, other OFF and the fogger is at DMX mode.


### **2) Wireless remote control**

Connect the remote control box/receiver to the three-pin socket on the rear of the fogger and then you can use the wireless launcher to on/off emit the fog.

### **3) ON/OFF control**

Connect the remote control box to the three-pin socket on the rear of the fogger and then you can press the button on the box to on/off emit the fog. After a certain warm-up time, the device is ready to operate. Upon warming up, the stand-by lamp, red LED, of the remote control lights up. When the green led lights up, the fogger is ready to emit and by switching the control box the fogger starts emission. The temperature is regulated by a high quality thermostat.

### **4) fog timer**

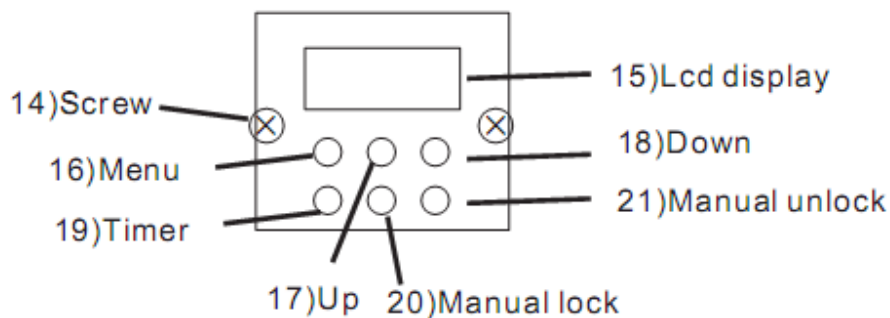

You can use fogger timer on the rear to achieve continuous fog output and emission at intervals.

You can use fogger timer on the rear to achieve continuous fog output and emission at intervals.

**Warming up:** means the fogger is heating;

**Ready to fog:** means the fogger can emit the fog;

**Timer volume 1%-100%:** press the button MENU, it shows Timer volume 1%-100%, you can set the fog output volume from small to big by the buttons UP or DOWN;

**Interval set 1S...900S:** press the button MENU, till it shows Interval set 1S...900S, you can set the interval fog emission time from 1-900 seconds by the buttons UP or DOWN;

**Duration set 1S...200S:** press the button MENU, it will show Duration set 1S...200S, you can set the continuous fog output from 1-200 seconds by the buttons UP or DOWN;

**TIMER:** when the interval time and duration time set, press the button TIMER, the fogger starts to work, Duration/Interval time you have just set shows in the LCD display of the control box;

**Volume out 1%-100%:** when the fogger ready to emit, press the Manual Lock button, it shows Volume out 1%-100%, adjust the fog emission volume from 1% small to 100% big by the buttons UP or DOWN, the fogger emits as adjusted; push the MANUAL LOCK button for a second time, it holds the emission of the fogger;

**Non stop burst:** when the fogger ready to emit, press the button MANUAL LOCK, it shows Non stop burst, the fogger will emit continuously;

**Manual unlock:** press the button MANUAL UNLOCK, the fogger will emit, hold pressing and the fogger will emit continuously;

**DMX address#001...512:** press the button MENU, it will show DMX512#001...512, you can set the desired DMX address by the buttons UP or DOWN.

**CAUTION: The escape nozzle will heat up during operation. Therefore do not touch the nozzle until it has cooled down completely.**

### ***Cleaning the heating element***

The heating element should regularly be cleaned every 30 operational hours in order to avoid clogging. Use haze machine cleaner available at your dealer.

#### **Procedure:**

Fill cleaner into empty tank. Run the machine several times in a well-ventilated room only. The number of repetitions depends on the pollution level of the vaporizing elements. After use clean all remaining cleaner and rinse the tank thoroughly. There are no serviceable parts inside the device except for the fuse. Maintenance and service operations are only to be carried out by authorized dealers.

### ***Replacing the fuse***

If the fine-wire fuse of the device fuses, only replace the fuse by a fuse of same type and rating.

**Before replacing the fuse, unplug mains lead.**

#### **Procedure:**

**Step 1:** Open the fuse holder on the rear panel with a fitting screwdriver.

**Step 2:** Remove the old fuse from the fuse holder.

**Step 3:** Install the new fuse in the fuse holder.

**Step 4:** Replace the fuse holder in the housing.

Should you need any spare parts, please use genuine parts.

If the power supply cable of this device will be damaged, it has to be replaced by a special power supply cable available at your dealer. If defective, please dispose of the unusable device in accordance with the current legal regulations. Should you have further questions, please contact your dealer.

## **TECHNICAL SPECIFICATIONS**

Power supply: 220 V AC, 50 Hz

Fuse: 250V 15A

Power consumption: 3000 W

Warm-up time: approx. 10 min.

Fog output: 40,000 cuft/min

Tank capacity: 10L

Dimension: 660\*360\*300mm

Weight: 16 kgs

**Please note: Every information is subject to change without prior notice.**