



## TABLE OF CONTENTS

<b>I. Safety precautions</b> .....	<b>3</b>
<b>II. Connections of hardware</b>	
1. Rear view .....	4
2. Port description .....	4
3. Connectivity Diagram of hardware.....	6
<b>III. Frontal panel operations</b>	
1. Diagram of frontal panel.....	7
2. Button operations .....	7
3. Software control.....	8
<b>IV. Output image setup</b>	
1. LedSync822A output image.....	9
2. Setup LedSync822A output image .....	10
<b>V. Troubleshooting</b> .....	<b>12</b>
<b>VI. Specifications</b> .....	<b>15</b>

## I. Safety Precautions

### **Danger!**

There is high voltage in the processor, to prevent any unexpected hazard, unless you are a maintenance, please do not open the cover of the device.

### **Warning!**

1. This device shall not encounter water sprinkle or splash, please do not place anything containing water on this device.
2. To prevent fire, keep this device far from any fire source.
3. To keep good ventilation, there shall be at least 20cm interval between frontal and rear panel of the device.
4. If this device gives out any strange noise, smoke or smell, please immediately unplug the power cord from receptacle, and contact local dealer.
5. **Please do not plug or unplug DVI signal cable when the device on power.**

### **Caution!**

1. Please thoroughly read this manual before using this device, and keep it well for future reference.
2. In the event of lighting or when you are not going to use the device for a long time, please pull the power plug out of receptacle.
3. Nobody other than professional technicians can operate the device, unless they have been appropriately trained or under guidance of technicians.
4. To prevent equipment damage or electric shock, please don't fill in anything in the vent of the device.
5. Do not place the device near any water source or anywhere damp.
6. Do not place the device near any radiator or anywhere under high temperature.
7. To prevent rupture or damage of power cords, please handle and keep them properly.
8. Please immediately unplug power cord and have the device repaired, when
  - 1) Liquid splashes to the device.
  - 2) The device is dropped down or cabinet is damaged.
  - 3) Obvious malpractice is found or performance degrades.

## II. Connections of hardware

### 1. Rear view

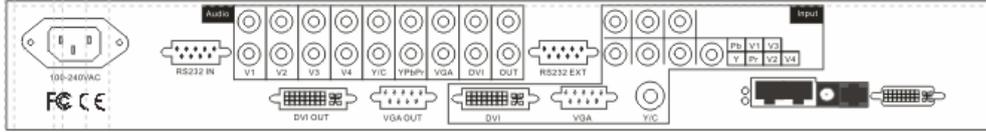


Figure 1

### 2. Port description

1) Video input (**INPUT** column)

**LedSync822A** supports 8-channel signal input, including:

Port name	Description
<b>V1~V4</b>	4-channel PAL/NTSC system composite video input
<b>Y/C (S_Video)</b>	1-channel PAL/NTSC system S_Video input
<b>VGA</b>	1-channel computer analog signal input
<b>DVI</b>	1-channel computer digital signal input
<b>YPbPr</b>	1-channel high-definition component signal input

2) **Audio** input

Corresponding to 8-channel video input signal, **LedSync822A** supports 8-channel stereo audio signal input

3) Video signal output

Port name	Description
<b>VGA OUT</b>	1-channel analog RGBHV signal output, it can be connected to a local display device and used as monitor (it is strongly recommended to use this port when operating and setting <b>LedSync822A</b> ).
<b>DVI OUT</b>	1-channel digital <b>DVI</b> signal output, it is to be connected with external LED transmission card or LED transmission box

4) Audio signal output

It corresponds to the selected video input signal, and output this channel audio input signals.

5) Signals of other ports

Port name	Description
<b>RS232 IN</b>	Serial communication port, <b>LedSync822A's</b> Timing Control Software running on Upper Controller can operate and control <b>LedSync822A</b> via this communication port.

**3. Connectivity Diagram of hardware:**

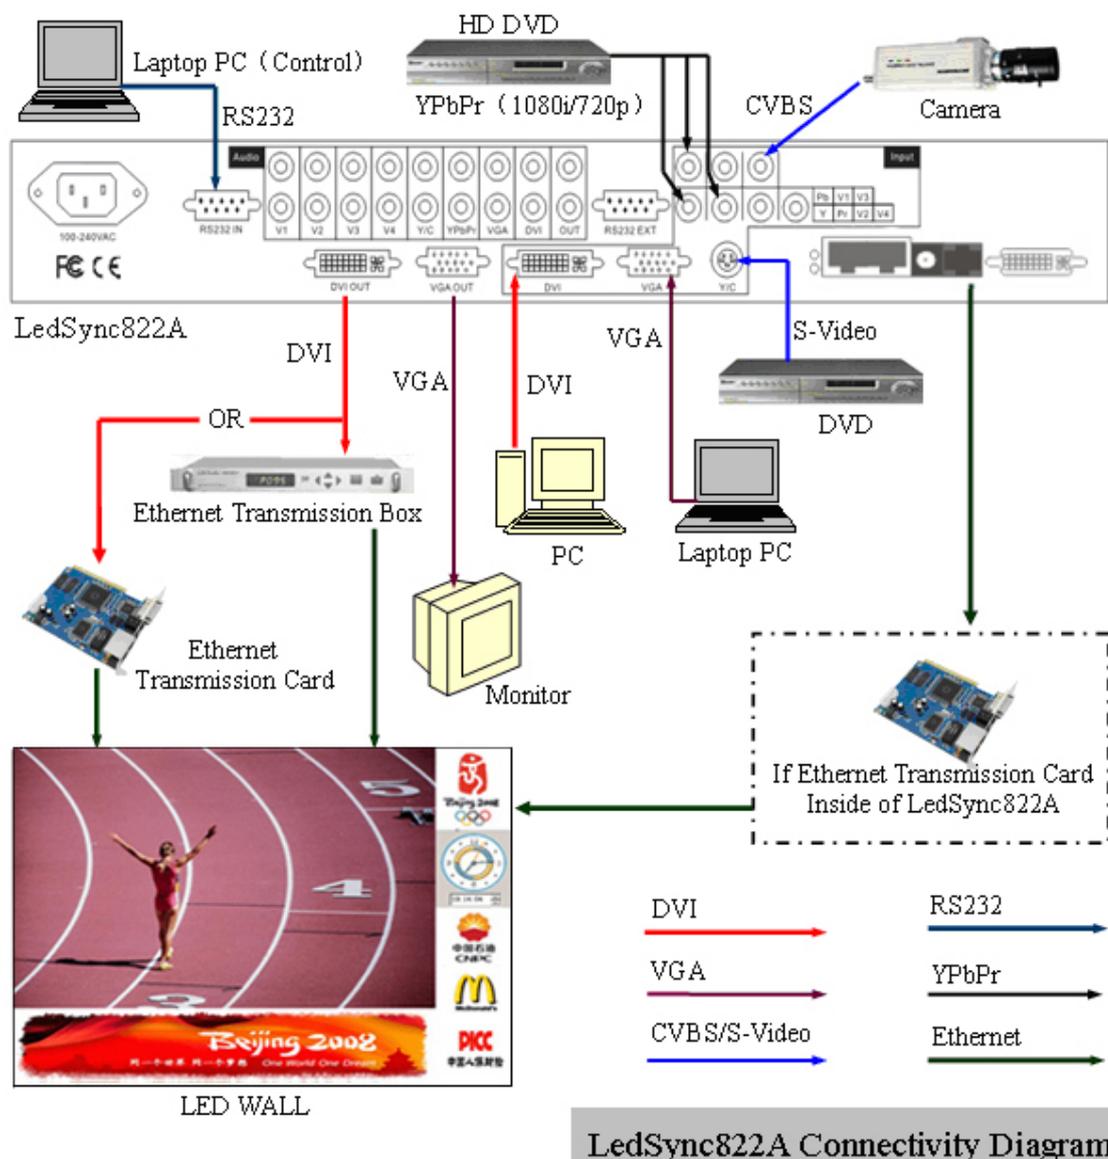


Figure 2

### III. Frontal panel operations

#### 1. Diagram of frontal panel

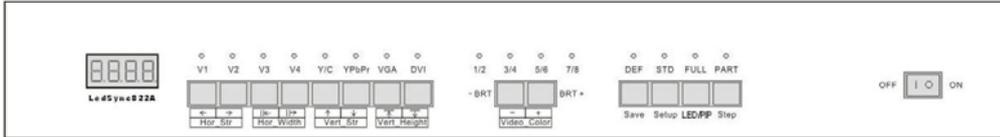


Figure 3

#### 2. Button operations:

LedSync822A have 14 buttons on frontal panel, after start-up all these buttons are in operation mode. Their functions are described as below:

##### 1) Select input video source

Button names	Description
<b>V1~V4</b>	Switch to V1~V4, composite video input
<b>Y/C (S_Video)</b>	Switch to S-Video input
<b>VGA</b>	Switch to computer analog signal input Note: to get clarity computer image, you can click the "VGA" button 6 times continuously, and then you can click "VGA" button again and again to change the computer image sampling phase, when the computer image be displayed most clearly, the adjustment is ok.
<b>DVI</b>	Switch to computer digital signal input
<b>YPbPr</b>	Switch to high-definition component video signal input Note: to get clarity HDTV image, you can click the "YPbPr" button 6 times continuously, and then you can click "YPbPr" button again and again to change the HDTV image sampling phase, when the HDTV image be displayed most clearly, the adjustment is ok.

Switch audio input while operating above buttons, select the audio signal input from corresponding video input to output it through **Audio OUT**.

Notes: when user has selected input signal, if there are signal input in corresponding signal input ports and are in **LedSync822A** formats, the indicator above corresponding button will be illumed. However, when there are no signal input in corresponding input ports, the indicator above corresponding button will blink, and dark screen will be displayed on the screen.

2) Select output brightness

Button names	Description
<b>BRT -</b>	Decrease output image brightness of <b>LedSync822A</b>
<b>BRT +</b>	Increase output image brightness of <b>LedSync822A</b>

**LedSync822A** supports 8 levels Brightness, "1" represents the lowest brightness, 8 represents the highest brightness. When brightness is adjusted to be "1", "3", "5" or "7", their LED indicators will blink; When brightness is adjusted to be "1", "3", "5" or "7", their LED indicators will keep illumed.

3) Select image status

Button names	Description
<b>DEF</b>	Select user-defined image parameters, including GAMMA value, Video Chrom and Hue.
<b>STD</b>	Select a standard image status to output image. This standard image has been preset at factory, including GAMMA =1, Video Chrom and Video Hue = standard values. User can't modify these standard values.

4) Select FULL/PART display (VD/PIP,PC/ZOOM)

Button names	Description
<b>VD/PIP</b>	Switch the video display mode, when the indicator above this button be extinguished, the video will be displayed with <b>PIP</b> mode, on the contrary, the video will be displayed on the whole LED screen
<b>PC/ZOOM</b>	Switch the VGA/DVI display mode , when the indicator above this button be extinguished, VGA/DVI input image will be shrinked onto the whole LED screen; when the indicator be illumed, VGA/DVI input image will be displayed partly without shrink; and when the indicator blink, VGA/DVI input image will be output fully without shrink.

### **3、 Software Control:**

**LedSync822A** is supplied with Timing Control software  `LedSync.exe` , user can operate and control LedSync822A using this software, including:

- Switch input signal source, change brightness of output images.
- Manually operate and control it or edit operation and control schedule to make it executed automatically.
- Carry out site control, or remote control over **LAN** or **WAN**.

For details please refer to ***LedSync82xx Timing Control***.

IV. Setup of output image

The following setups must be made by relevant qualified technicians. For ordinary users, unless they have received adequate relevant training, they shall not attempt the following setup operations!

1. LedSync822A output image

LedSync822A output images from **VGA OUT** and **DVI OUT** in the format: 1024×768 pixels, with refresh frequency of 60Hz.

We should set two output image window,they are:

- ◆ LED image window
- ◆ Video PIP window

First,We set **LedSync822A** to output the images exactly fitting the resolution of LED screen, so that the LED could display a full frame of image. See the diagram below:

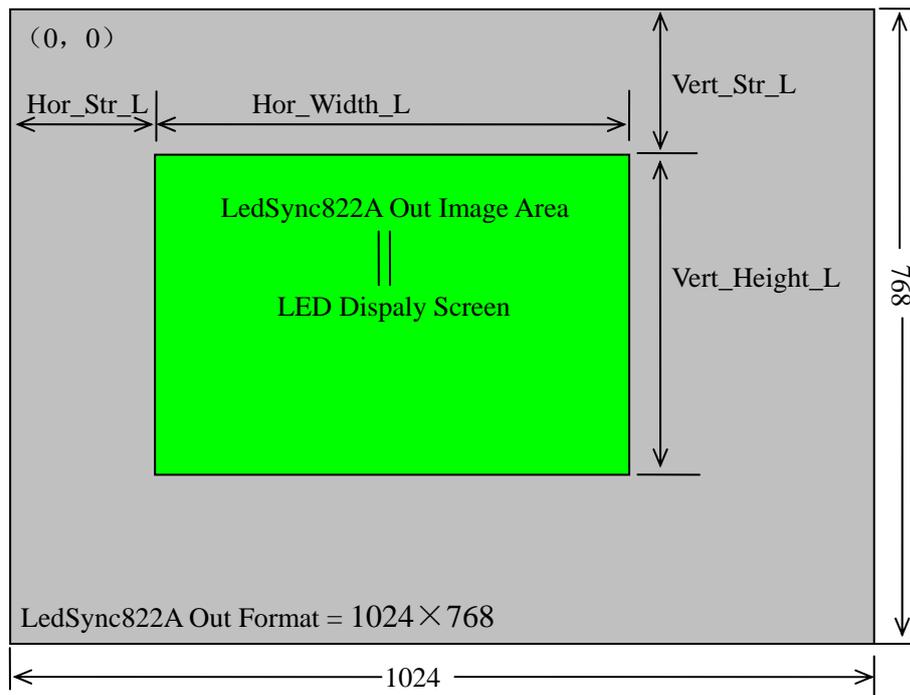


Figure 4

As above figure shows: the size and location of **LedSync822A** output LED image window are defined by 4 groups of parameters:

Name	Description
<b>Hor_Str_L</b>	The horizontal start position of output image
<b>Hor_Width_L</b>	The horizontal width of output image
<b>Vert_Str_L</b>	The vertical start position of output image
<b>Vert_Height_L</b>	The vertical height of output image

Video PIP window should be set to located in the LED image window, as the diagram below shows:

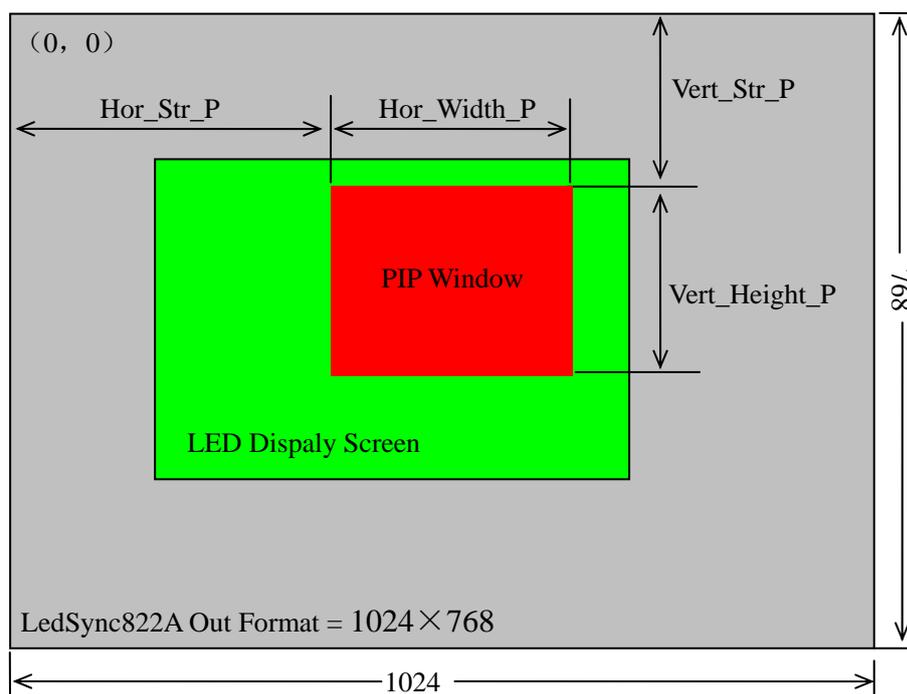


Figure 5

As above figure shows: the size and location of **LedSync822A** output PIP window are defined by 4 groups of parameters:

Name	Description
<b>Hor_Str_P</b>	The horizontal start position of output image
<b>Hor_Width_P</b>	The horizontal width of output image
<b>Vert_Str_P</b>	The vertical start position of output image
<b>Vert_Height_P</b>	The vertical height of output image

The start coordinates (0, 0) of sync820C output image is defined in the right top of 1024 x 768 pixels output area.

## 2. Setup of LedSync822A output image

**LedSync822A** can setup its output image by operating the buttons on frontal panel. After **LedSync822A** is started up, all buttons on frontal panel are in operation mode. As above section **III.2** describes, if you press “**STD**” button for continuous 18 times, **LedSync822A** will enter setup state, and all buttons on frontal panel are ready to be in setup mode. See the table below for the definitions of each button:

Name		Description	
<b>Hor_Str</b>		Move output image leftward.	
		Move output image rightward.	
<b>Hor_Width</b>		Decrease width of output image	
		Increase width of output image	
<b>Vert_Str</b>		Move output image upward.	
		Move output image downward.	
<b>Vert_Height</b>		Decrease height of output image	
		Increase height of output image	
<b>Video_Color</b>	-	Decrease video color	Standard color value=0. -16 represents the lowest color, +16 represents the highest color
	+	Increase video color	
<b>Save</b>		Save currently adjusted values	
<b>Setup</b>		Press the button for continuous 18 times, <b>LedSync822A</b> will enter setup state, press it again, <b>LedSync822A</b> will exit setup state and enter operation state.	
<b>LED/PIP</b>		Switch the setup window, <b>LED</b> or <b>PIP</b>	
<b>Step</b>		Select step value 1 or 10	

**Notes:**

- a) Generally **Hor\_Str** ≥ 0. If you need modify it, the value of **Hor\_Str** can be setup to be - 8 ;
- b) Generally **Vert\_Str** ≥ 0. If you need modify it, the value of

- Vert\_Str** can be setup to be – 5 ;
- c) Generally, the start coordinates of output image (**Hor\_Str\_L** , **Vert\_Str\_L** ) should be identical to the start coordinates of the input image that LED transmission card captured;
  - d) The resolution of output image can be adjusted to the lowest 8 × 8 pixels;
  - e) The output image shall not exceed the output area of 1024 × 768 pixels;
  - f) While the current video image of **LedSync822A** is valid image, the video color can be adjusted;
  - g) The custom video color is only accessible by pressing “**DEF**” button while in operation mode;
  - h) If there are no valid input signals in **LedSync822A**, when it enters setup mode, a green screen will be generated as LED window reference image and a red screen as PIP window reference image;
  - i) It is strongly recommended to connect a VGA monitor to **VGA OUT** of **LedSync822A**, so as to intuitively display all above adjustment and setups.

## V. Troubleshooting

### 1、 Dark screen, no image on LED

<p>Check the input source of <b>LedSync822A</b> for any abnormality. If the indicator above input signal button is illumed, it means the input source is in good condition; however, if the indicator blinks, it means some fault has occurred.</p>	
<p>If the input source is normal, the indicator will keep illumed.</p>	
	<p>Press "<b>PC/ZOOM</b>" button on frontal panel of <b>LedSync822A</b>. When the indicator blink, LED will display image; however, the indicator be illumed, LED will display dark screen; the moment please check whether the start coordinates of <b>LedSync822A</b> output image is identical to the start coordinates of the input image that LED transmission card captured.</p>
<p>No image display even when <b>PC/ZOOM</b>'s indicator blink, connect one VGA monitor to <b>VGA OUT</b> of <b>LedSync822A</b>, check whether there are images appearing on VGA monitor.</p>	
	<p><a href="#">If there are images on VGA monitor,please check:</a></p>
	<p>The DVI connection between DVI output of <b>LedSync822A</b> and DVI input of LED transmission card</p>
	<p>Each section of Ethernet cable connection between LED transmission card and LED screen. <b>The signal has been weakened a lot and imposed high risk of interference from outside after long-term transmission passing many sections of Ethernet cable. Please adopt high-quality Ethernet cable and RJ45 connector, and shorten the Ethernet cable to the most extent.</b></p>
	<p>Hot swap of DVI cable may result in burning of DVI drive or receiving chips.</p>
	<p><a href="#">If there are no images on VGA monitor, please have supplier repair it</a></p>
<p>If the input source is abnormal, the indicator will keep blink.</p>	
	<p><a href="#">If current input source is: DVI</a></p>
	<p>First, check DVI connection cable</p>
	<p>Actuate DVI output of PC graphic display card</p>

	<p>Set the output resolution any of the following              800×600              1024×768              1280×1024              Note that DVI output refresh frequency (Vertical Scanning Frequency) must be: 60Hz              If DVI indicator of <b>LedSync822A</b> frontal panel still blinks, please have supplier repair it.</p>
	<p><b>If current input source is: VGA</b></p>
	<p>First, check VGA connection cable              Actuate VGA output of PC graphic display card              Set the output definition any of the following              800×600              1024×768              1280×1024              Note that VGA output refresh frequency (Vertical Scanning Frequency) must be: 60Hz              If VGA indicator of <b>LedSync822A</b> frontal panel still blinks, please have supplier repair it.</p>
	<p><b>If current input source is: YPbPr</b></p>
	<p>First, check YPbPr cable, the three cables Y, Pb, Pr are connected to corresponding input jacks of LedSync822A respectively.              Make sure YPbPr signal is in any of the following formats:              720p@60Hz              1080i@60Hz              If the YPbPr indicator on frontal panel of LedSync822A still blinks, please have supplier repair it.</p>
	<p><b>If current input source is: Y/C(S_Video)</b></p>
	<p>Check S_Video cable.              Make sure S_Video output of DVD player has been actuated (some DVD players might have disabled S_Video output, it must be reset and actuated).              If Y/C indicator on frontal panel of LedSync822A still blinks, please have supplier repair it</p>

**2、 Timing Control software  LedSync.exe can't control LedSync822A**

- 1) Make sure RS232 cable supplied with the machine is properly connected, one end connects **COM** port of PC, the other end connects **RS232 IN** of **LedSync822A**;
- 2) Identify the No. of the PC's COM port to be connected, e.g. COM1 or COM2, select appropriate COM port on  LedSync.exe control software;
- 3) Select appropriate COM port, and ensure this COM port not yet occupied by other applications, e.g. the common **LedStudio** software;
- 4) If after the above steps **LedSync822A** still can't be controlled, please have supplier repair it.

## VI. Specifications

<b>Inputs</b>	
Nums/Type	1×RGBHV(VGA) 1×DVI 1×YPbPr(HDTV) 4×CVBS 1×Y/C(S-Video)
Video system	PAL/NTSC
CVBS Scope/Impedance	1V (p_p) / 75 Ω
Y/C Scope/Impedance	Y: 0.7V (p_p) / 75 Ω , C: 0.35V (p_p) / 75 Ω
RGB/DVI resolution	1280×1024@60Hz, 1024×768@60Hz , 800×600@60Hz
RGB Scope/Impedance	0.7 V (p_p) / 75 Ω
YPbPr (HDTV) System	1280×720p@60Hz, 1920×1080i@60Hz
YPbPr (HDTV) Scope/Impedance	Y: -0.3V ~ +0.7V (p_p) / 75 Ω Pb: -0.35V ~ +0.35V (p_p) / 75 Ω Pr: -0.35V ~ +0.35V (p_p) / 75 Ω
Connectors	RGBHV: 15pin D_Sub(female) DVI: 24+1 DVI_D YPbPr(HDTV): RCA×3 CVBS: RCA Y/C: 4pin mini DIN(female)
<b>Outputs</b>	
Nums/Type	1×RGBHV 1×DVI
RGB/DVI resolution	1024×768@60Hz
RGB Scope/Impedance	0.7 V (p_p) / 75 Ω
Connectors	RGBHV: 15pin D_Sub(female) DVI: 24+1 DVI_D
<b>Others</b>	
Control	RS 232. Panel Button
Power	100-240VAC 60W 50/60Hz
Operating Temp	5-40 °C
Humidity	15-85%
Size	155 mm (high) × 350mm (wide) × 485mm (length)
Weight	5.6 Kg